

Commands about CoA function

1.1.1 errdisable detect cause coa

【Description】

Allow CoA shutdown port and set port to err-disable status.

By default, allow all listed functions shutdown port and set port to err-disable status.

【example】

Allow CoA functions shutdown port and set port to err-disable status.

```
Hostname#configure terminal
Hostname(config)#errdisable detect cause coa
```

1.1.2 errdisable recovery cause coa

【Description】

Allow auto no shutdown port and clear err-disable status of port.

【Example】

```
Hostname#configure terminal
Hostname(config)#errdisable recovery cause coa
Hostname(config)#errdisable recovery interval 60
```

1.1.3 show errdisable detect

【Example】

```
Hostname#show errdisable detect
ErrDisable Reason          Detect
-----
bpduguard                  Enabled
dai                        Enabled
dhcp-snooping              Enabled
l2pt                       Enabled
link-flap                  Enabled
loopback-detect            Enabled
oam                        Enabled
port-security              Enabled
storm-control              Enabled
crc-error                  Enabled
ulfd                       Enabled
```

```

transceiver-power-low Enabled
transceiver-power-high Enabled
mac-address-flapping Enabled
coa Enabled

```

1.1.4 show errdisable recovery

【example】

```

Hostname#show errdisable recovery
Error disable auto recovery config

interval:300 seconds
ErrDisable Reason      Timer Status
-----
bpduguard              Disabled
dai                    Disabled
dhcp-snooping          Disabled
eips-udld              Disabled
l2pt                   Disabled
link-flap              Enabled
loopback-detect        Disabled
oam                    Disabled
port-security          Disabled
storm-control          Disabled
crc-error              Disabled
ulfd                   Disabled
transceiver-power-low  Disabled
transceiver-power-high Disabled
mac-address-flapping   Disabled
coa                    Disabled

```

1.1.5 dot1x mac-authentication radius service-type to call-check

【Description】

dot1x mac-authentication radius service-type to call-check Make device use call-check(10) service-type attribute of authentication message and accounting message

no dot1x mac-authentication radius service-type to call-check Make device use default attribute Frame(2)

service-type(6)=call-check(10) attribute is used to make ISE identify MAC authentication and 802.1X, During MAC authentication with ISE, device should use service-tpe(6)=call-check(10) in request.

During 802.1X authentication with ISE, device should use service-tpe(6)=Frame(2) in request.

【Example】

```

Hostname#configure terminal
Hostname(config)#dot1x mac-authentication radius service-type to call-check

```

1.1.6 radius authorization bounce-port

【Description】

radius authorization bounce-port Enable device support CoA bounce-port request.

no radius authorization bounce-port By default device not response bounce-port request

【Example】

```
Hostname#configure terminal
```

```
Hostname(config)#radius authorization bounce-port
```

1.1.7 radius authorization down-port

【Description】

radius authorization down-port Enable device support CoA down-port request.

no radius authorization down-port By default device not response CoA down-port request.

【Example】

```
Hostname#configure terminal
```

```
Hostname(config)#radius authorization down-port
```